



ESS 7.0 | 9.0 | X | Z

OPERATING MANUAL

/////



Operating Manual ESS 7.0 | ESS 9.0 | ESS X | ESS Z Document #30085-1 Revision 1-10 | 13-Jul-21

Translation of original operating manual (German)



Copyright © BMZ Germany GmbH

Subject to technical modifications that are required for advancements.

This operating manual or parts thereof may not be reproduced in any format (photocopy, micro film or other methods) or used, duplicated or processed with the help of electronic systems without a written consent of BMZ Germany GmbH. In case of violations of these regulations, we reserve the right to claim damage compensation.

BMZ Germany | Headquarter

BMZ Germany GmbH Zeche Gustav 1 63768 Karlstein am Main

+49 (0) 6188 9956 0
+49 (0) 6188 9956 9830
+49 (0) 6188 9956 699
www.bmz-group.com
www.bmz-central-service.com
CS.BigPack@bmz-group.com

BMZ USA

BMZ USA Inc. 1429 Miller Store Road Virginia Beach, Virginia, 23455-3324

Phone:	+1 757 821 8494
Fax:	+1 757 821 8499
Email:	Service.USA@bmz-group.com

BMZ Poland

BMZ Poland Sp. z o.o. Alberta Einsteina 9 44-109 Gliwice

Phone:+48 32 784 24 50 ext. 513Email:BMZPolandServiceCenter@bmz-group.com



About this manual

General

A qualified electrician must carry out installation, commissioning and maintenance. Please read this operating manual carefully to ensure a fault-free operation of the BMZ ESS battery storage system.

Please store this operating manual such that it is accessible to all persons who work on the BMZ ESS system.

Scope

This manual is intended for all products of the BMZ ESS series

- BMZ ESS 7.0
 - o Art. No. 24930-xx
 - o Art. No. 30110-xx
 - o Art. No. 30890-xx
 - o Art. No. 30891-xx
 - o Art. No. 30892-xx
 - o Art. No. 31555-xx
 - o Art. No. 31560-xx
 - o (Art. No. 32905-xx)
- BMZ ESS 9.0
 - o Art. No. 32370-xx
 - o Art. No. 33741-xx
- BMZ ESS X
 - o Art. No. 37400-xx
 - o Art. No. 37401-xx
- BMZ ESS Z
 - o Art. No. 610850

Differentiation between an operating company and operator

The end consumer is referred to as an operating company in this manual. The system is installed and put into operation for this operating company.

A person, who works on the system or its controllers, is referred to as an operator in this manual. This person must be a qualified electrician authorised by BMZ Germany GmbH.

Liability exclusion

BMZ Germany GmbH does not bear any liability for damage resulting from unintended usage and non-adherence to this manual. This includes personal injuries, material damage, damage to the product as well as consequential damage, repair damage and other handling of the product by non-qualified electricians. This liability limitation is applicable even when non-original spare parts are used.

Carrying out arbitrary changes or technical modifications in the product is strictly prohibited.

A liability for profits lost or other costs and financial losses is ruled out.



Table of contents

	Abo	ut this manual	4
	Tabl	e of contents	5
	List	of figures	8
1	Saf	etv	10
-			40
	1.1	Classification of warnings and intended use	10
		1.1.1 Warnings in the operating manual	10
		1.1.2 Intended use	11
	1.2	Safety instructions to be followed	12
		1.2.1 General safety instructions	12
		1.2.2 Safety instructions when working with the tool	13
		1.2.3 Safety instructions for transport and installation	
		1.2.4 Safety instructions for operation	14
		1.2.5 Safety instructions for cleaning	16
		1.2.6 Safety instructions for maintenance and dismantling	16
		1.2.7 Safety instructions for battery interiors	
		1.2.8 Safety instructions for fire prevention	19
		1.2.9 Explosion protection	20
		1.2.10 Residual risks	20
	1.3	Data and safety devices of the battery storage system	20
		1.3.1 General hazard instructions and pictograms	20
		1.3.2 Installed safety systems	
		1.3.3 Safety checks	
2	Fun 2.1	rction, delivery scope and technical key variables Function	23 23
	2.2	Delivery scope	23
	2.3	System overview	23
	2.4	Rating plates and warning stickers	25
	2.5	Technical key variables	27
3	Tra	nsport	28
	•		
	3.1	Safety instructions for transport	20 مور
	3.2	Transporting the battery storage system	20
4	Inst	allation, assembly and commissioning for the first time	32
	4.1	Installation site requirements	32
	4.2	Filling the installation check list	33
	4.3	Installation of the battery storage system	34
	4.4	Preparing the electrical connections for the single mode	34
		4.4.1 Checking the connections	38
		4.4.2 Switching the battery storage system on and off	38
		4.4.3 Configuring the parameters of the inverter	40
	45	Preparing the electrical connections for the parallel mode	40
	4.6	Connection concept of multiple BMZ ESS batteries with one or more battery	
		inverters	41
		4.6.1 Communication	41



	4.6.2 Contacting power cables	43
4.7	Configuration of the ESS parallel mode	48
	4.7.1 1-phase operation of a SMA Sunny Island inverter on 1 ESS battery	48
	4.7.2 1-phase operation of a SMA Sunny Island inverter on 2 ESS batteries	48
	4.7.3 1-phase operation of a SMA Sunny Island inverter on 3 ESS batteries	49
	4.7.4 3-phase operation of a SMA Sunny Island inverter on 3 ESS batteries	50
	4.7.5 3-phase operation of a SMA Sunny Island inverter on 4 ESS batteries	51
	4.7.6 3-phase operation of a SMA Sunny Island inverter on 5 ESS batteries	52
	4.7.7 3-phase operation of a SMA Sunny Island inverter on 6 ESS batteries	53
	4.7.8 3-phase operation of a SMA Sunny Island inverter on 9 ESS batteries	54
	4.7.9 3-phase operation of a SMA Sunny Island inverter on 12 ESS batteries	55
48	Configuration of the ESS battery	56
4.0	4.8.1 System structure	56
	4.8.2 Addressing the batteries	56
4.9	Definition of the battery mode during commissioning and parameter configuration	n56
	4.5.1 Single	50 56
	4.5.2 Waster	56
	4.9.5 Slave	50
4.10	Work step sequence to configure the parameters of batteries	57
4.11	Work step sequence to commission the batteries	58
4.12	Configuration of firmware for parallel mode	58
	4.12.1 Setting the master battery mode	59
	4.12.2 Setting the master battery address	59
	4.12.3 Setting the slave battery mode	60
	4.12.4 Setting the slave battery address	61
4.13	Commissioning the parallel connection of multiple batteries	61
	4.13.1 Switch-on sequence	61
	4.13.2 Stand-by mode of a slave battery:	61
	4.13.3 Switch-on criterion of the slave battery:	61
	4.13.4 Example 1:	62
	4.13.5 Example 2:	63
	4.13.6 Example 3:	63
4.14	Checking the parallel connection of multiple batteries	64
	4.14.1 Check the number of connected (detected) batteries	64
	4.14.2 Check the number of batteries for which the main relay is closed	65
4 4 5	Adding your bottoriog	C E
4.15	Adding new batteries	65 65
4.10	A 16 1 Switching the battery storage system on and off	03
	4.16.1 Switching the parameters of the inverter	دە
	4.10.2 Comparing the parameters of the inverter	00
4.17	Recommended parameters of the inverter	68
	4.17.1 SMA Sunny Island with Sunny Control Module	68
	4.17.2 Learning cycle	70
Оре	ration and service software	71
5.1	Pilot lamps (LED)	71
	5.1.1 LED indicators on the battery module	71
	5.1.2 Charging status indicator	72
ΕĴ	Connection of the notebook for convising	70
5.2		1 Z



		5.2.1 USB port	72
		5.2.2 Service software	73
6	Fau	lt/damage event	74
	6.1	Fault indicators	74
		6.1.1 Fault indicators of pilot lamps	74
	6.2	Actions to be taken in case of a damage	74
		6.2.1 First aid measures	74
7	Serv	vice and maintenance activities	76
	7.1	Complaint handling	77
8	War	ranty conditions	78
9	Disr	nantling and disposal	79
	9.1	Disposal of the battery storage system	79
10	Ann	iexe	80
	10.1	Declaration of conformity	81
	10.2	Installation check list	86



List of figures

Figure 1-1: Hazard instructions, pictograms	21
Figure 1-2: battery storage system, side view of NH1 isolator	21
Figure 2-1: delivery scope	23
Figure 2-2: battery storage system, front view	23
Figure 2-3: battery storage system, side view	24
Figure 2-4: battery storage system, side view	24
Figure 2-5: battery storage system, rear view	25
Figure 2-6: battery storage system, rear side	25
Figure 2-7: rating plate	26
Figure 2-8: rating plate	26
Figure 2-9: recycling symbol	26
Figure 2-10: battery storage system, recycling symbol	26
Figure 2-11: overview of technical specifications	27
Figure 3-1: seal position	29
Figure 3-2: seal position	29
Figure 3-3: transporting with the sack truck	31
Figure 4-1 : Requirements for the installation site, distance of the ESS from walls, top view	32
Figure 4-2 : Requirements for the installation site, distance of the ESS from walls, side view	33
Figure 4-3: representation of the pulled current isolator	34
Figure 4-4: inverter, connection area for battery lines.	35
Figure 4-5: sample representation of the connection of plus and minus power cables with the SMA	4
Sunny Island inverter	. 35
Figure 4-6: representation of external connections of the battery system CAN	36
Figure 4-7: hattery storage system, side view of the opened housing	37
Figure 4-8: representation of the correctly inserted fuses	37
Figure 4-9: hattery storage system side view	38
Figure 4-5. Sutterly storage system, side view initial connection	
Figure 4-10: Communication cubing, ESS parallel connection	42
Figure 4-12: nin assignment of PIA5 V-adapter (T-connector)	42
Figure 4-12: battery storage system side view power isolator pulled	42
Figure 4-13: Dattely storage system, side view, power isolator puned	43
Figure 4-14. Cable lengths of the LSS system.	44
Figure 4-15: Output Cable OF BAT Breaker Box	45
Figure 4-10. BAT BREAKER BOX OF Enviree (example for 6 batteries and 3 inverters) with a closed	10
Figure 4.17: DAT DDEAKED Day of Equitable (avample for 6 betteries and 2 invertors) with an open	40
Figure 4-17: BAT BREAKER BOX OF Envited (example for 6 batteries and 3 inverters) with an open	47
Figure 4.19 - 1 phase exercise on 1.555 betters	47
Figure 4-18 : 1-phase operation on 1 ESS battery	48
Figure 4-19: 1-phase operation on 2 ESS batteries	48
Figure 4-20: 1-phase operation on 3 ESS batteries	49
Figure 4-21: 3-phase operation on 3 ESS batteries	50
Figure 4-22: 3-phase operation on 4 ESS batteries	51
Figure 4-23: 3-phase operation on 5 ESS batteries	52
Figure 4-24: 3-phase operation on 6 ESS batteries	53
Figure 4-25: 3-phase operation on 9 ESS batteries	54
Figure 4-26: 3-phase operation on 12 ESS batteries	55
Figure 4-27: representation of the BMZ ESS service tool	56
Figure 4-28: representation of the work sequence to configure the parameters of a BMZ ESS batte	ry
	57



Figure 4-29: representation of the work sequence to commission a BMZ ESS battery	58
Figure 4-30: file structure of the BMZ ESS service tool	59
Figure 4-31: representation of configuration of the parameters of a BMZ ESS battery	59
Figure 4-32: representation of configuration of the parameters of a BMZ ESS battery	60
Figure 4-33: representation of configuration of the parameters of a BMZ ESS battery	60
Figure 4-34: representation of configuration of the parameters of a BMZ ESS battery	61
Figure 4-35: block circuit diagram of the BMZ ESS slave battery	62
Figure 4-36: representation of example 1, different SOC of BMZ ESS batteries connected in parallel.	62
Figure 4-37: representation of example 2, different SOC of BMZ ESS batteries connected in parallel.	63
Figure 4-38: representation of example 3, different SOC of BMZ ESS batteries connected in parallel.	63
Figure 4-39: check the number of BMZ ESS batteries connected in parallel	64
Figure 4-40: check the number of BMZ ESS batteries connected in parallel	65
Figure 4-41: SMA Parameter on-grid with Sunny Control Module	69
Figure 4-42: SMA Parameter off-grid with Sunny Control Module	69
Figure 5-1: Pilot lamps table (LED)	71
Figure 5-2: side view of BMZ ESS, service flap	72
Figure 5-3: push button with LEDs	72
Figure 5-4: USB communication	72
Figure 5-5: USB port of BMZ ESS battery, inner side of housing	73
Figure 5-6: push button and LEDs	73
Figure 10-1: EC Declaration of Conformity ESS 7.0 (1)	81
Figure 10-2: EC Declaration of Conformity ESS 7.0 (2)	82
Figure 10-3: EC Declaration of Conformity ESS 9.0	83
Figure 10-4: EC Declaration of Conformity ESS X	84
Figure 10-4: EC Declaration of Conformity ESS Z	85
Figure 10-5: installation check list	86
Figure 10-6: installation check list, part 2	87



1 Safety

Target group

This section is aimed at all persons, including technical personnel, commissioning and shutdown personnel as well as personnel who work on the battery storage system.

Background

Safety has utmost priority.

Use all aids provided to you along with the measures and processes listed in this section to ensure a safe operation. Get a detailed information about all safety aspects.

You should be aware of the fact that hazardous situations may always arise when handling battery storage systems. Furthermore, the use of a battery storage is associated with the residual risks under the following circumstances:

- Installation and maintenance activities are not carried out properly.
- Safety instructions given in this manual are not followed.

1.1 Classification of warnings and intended use

Safety instructions

This section describe warnings in this operating manual and the intended use of the machine.

1.1.1 Warnings in the operating manual

Warnings

Warnings serve as instructions and precautionary measures that must be followed and taken to avoid a hazardous situation.

Classification of warnings

Warnings can be classified depending on the magnitude of a hazardous situation. The classification is based on a probability assumption for an exposure to a hazardous situation and what could happen in such a case. This manual differentiates between four warnings:

A DANGER	"DANGER" warns against hazardous situations. Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.
	"Warning" warns against hazardous situations. Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.
A CAUTION	"CAUTION", in combination with the warning icon, warns against hazardous situations. Prevent these hazardous situations. Otherwise, they may lead to insignificant or minor injuries.
ATTENTION	"ATTENTION" indicates a possible hazardous situation. Avoid these situations. Otherwise, they may damage the machine.

Note

This icon draws your attention to important, useful and helpful information.



1.1.2 Intended use

Intended use of the battery system

The BMZ ESS system must be exclusively used to store the current generated by the photovoltaic systems.

Foreseeable misuse

Any other use is considered to be unintended. BMZ Germany GmbH shall not be responsible for damage resulted from this.

The BMZ ESS system is primarily **not** approved for the following usages:

- For a mobile use (e.g. on ships, in aeroplanes or in all types of land vehicles)
- For operation in outdoor areas
- For use in medical devices
- For use as a UPS system

Possible risk to life due to unintended usageThis battery system is exclusively intended for the aforementioned purpose.Any other use or a modification of the battery system without a written
consent of the manufacturer is considered to be unintended.The manufacturer will not assume liability for any resultant damage. The
operating company shall bear full responsibility for any risk.The battery system may be put into operation only if it is ensured that all
safety devices have been installed and functioning properly.Never install or operate a potentially or obviously defective battery storage.Prevent these hazardous situations. Otherwise, they will lead to deaths or
serious injuries.

Intended usage also implies compliance with the usage and operating instructions specified by the manufacturer as well as maintenance and servicing conditions.



1.2 Safety instructions to be followed

Safety instructions

Follow the safety instructions in this section to ensure the safety of persons and the system.

1.2.1 General safety instructions

Target group

These general safety instructions are intended for all operators and operating companies of the battery system. Each person, who is entrusted with the installation, commissioning, operation, cleaning, maintenance and repair activities, must have read and understood this operating manual, especially the **Safety** section.

Laws and regulations

Follow the instructions (regulations) of the relevant authorities as well as safety and operating instructions.

Spare parts

Only use original spare parts in case of repairs or when replacing the parts.

Using other parts that do not comply with our specifications may pose risks to persons and the system.

BMZ Germany GmbH shall not be liable for personal injuries and/or material damage resulting from changes in the system.

Operator

Only a qualified electrician may operate/maintain the battery storage system.



Suitable clothing (PPE)

Observe the following instructions regarding suitable clothing.

- Always wear protective shoes. Class S3
- Always wear ESD protective clothing.
- Wear suitable protective gloves.
- Wear suitable protective goggles.
- Do not carry electrically conductive objects (jewellery, rings, watches, chains)

Condition of the battery storage system

Keep the battery storage system clean and in an excellent condition. Operate the battery system only if it is in a flawless condition.



Other safety instructions

Follow the detailed safety instructions in Operation, Maintenance & Dismantling and Disposal sections.

1.2.2 Safety instructions when working with the tool

Target group

These safety instructions are intended for all persons who are entrusted with the transport and installation of the battery storage system.

Adhere to the operating manual

Always follow the instructions in the operating manual.

Working with tools

Adhere to the following warning when using tools:

A forgotten tool poses the risk of injuries. Do not keep any tools or metal parts on or in the battery.
 If a tool is not removed before commissioning, it may cause a short-circuit and injure persons or damage the system. Only use the completely insulated tool. Before commissioning/re-commissioning the battery system, ensure that there are no tools in the battery system.
Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.

1.2.3 Safety instructions for transport and installation

Target group

These safety instructions are intended for all persons who are entrusted with the transport and installation of the battery storage system.

Adhere to the operating manual

Always follow the instructions in the operating manual.

Adhere to the installation manual

Always follow the instructions in the installation manual.

Safety





A DANGER

Risk of life due to live components

There is a risk of life in case of a contact with live components.

- Only trained experts may work on the machine.
- When working on the current circuit or on the battery, always switch off the main switch first. Secure it with a padlock.
- When working on the current circuit or on the battery, always open the safety disconnection elements first. Secure the battery in which the disconnection elements are spatially separated and kept.
- Follow the 5 safety rules of battery technology.
- Never install or operate a potentially or obviously defective battery storage.

Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

Risk due to the loss of static stability

There is a risk of injuries due to the weight of the system.

- The system may tilt or fall in case of improper transport.
- Only use the transport aids that are suitable for the weight.
- Ensure the correct weight distribution of the system when transporting.
- The transport aids must provide a braking effect in case of a steep transport route.

Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.

Risk of injuries due to improper operation

Only trained experts may work on the system.

- In case of maintenance and repair activities, the danger area is extended by 1 m around the system. Pay attention to the swivel range of the opening flap.
- The operating company must ensure that the access to the danger area is prevented during the movement sequences.

Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.

1.2.4 Safety instructions for operation

Target group

These safety instructions are intended for all persons who are authorised to operate the battery storage system.

Adhere to the operating manual

Always follow the instructions in this operating manual when operating the battery storage system.





Safety instructions for operation

Only use original parts of the manufacturer or the components approved by the manufacturer for the energy storage unit.

A DANGER
Risk of life due to live components
 When working on the electrical device, you may come in direct contact with parts carrying electric potential. Such a direct contact causes an electric shock. Follow the 5 safety rules of battery technology. Furthermore, only experts may maintain, modify or dismantle the battery storage system. Never install or operate a potentially or obviously defective battery storage.
Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

A DANGER
Danger due to erupting fire (electric hazard)
Fire may erupt during operation due to sparks or heated surfaces.
 Follow the corresponding safety regulations (5 safety rules).
Furthermore, only experts may maintain, modify or dismantle the
battery storage system.
 Never install or operate a potentially or obviously defective battery
storage.
Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.







1.2.5 Safety instructions for cleaning

Target group

These safety instructions are intended for all persons who are authorised to clean the battery storage system.

Adhere to the operating manual

Always follow the instructions in the operating manual when cleaning the battery storage system.

Safety instructions for cleaning



1.2.6 Safety instructions for maintenance and dismantling

Target group

These safety instructions are intended for all persons who are authorised to maintain/dismantle the battery storage system.

Adhere to the operating manual

Always follow the instructions in this operating manual when maintaining/dismantling the battery storage system.

Safety instructions for maintenance/dismantling

Observe the following warning when working on the electrical device:



A DANGER

Risk of life due to live components

There is a risk of life in case of a contact with live components.

- Only trained experts may work on the system.
- When working on the current circuit or on the battery, always switch off the main switch first. Secure it with a padlock.
- When working on the current circuit or on the battery, always open the safety disconnection elements first. Secure the battery in which the disconnection elements are spatially separated and kept.
- Pay attention to the risk of electric arcs when pulling the NH1 isolator under the full load of the battery
- Follow the 5 safety rules of battery technology.

Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

A DANGER

Risk due to falling and being slung away

When working on the electrical device, a person may fall or slung away due to a contact with parts carrying electric potential or parts with electrostatic charges.

- Follow the corresponding safety regulations
- Furthermore, only experts may maintain, modify or dismantle the switch cabinet.

Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

A DANGER

Danger due to erupting fire (electric hazard)

Fire may erupt during operation due to sparks or heated surfaces.

- Follow the corresponding safety regulations (5 safety rules).
- Furthermore, only experts may maintain, modify or dismantle the switch cabinet.

Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

Health hazards due to negligent use of personal protective equipment

Working without personal protective equipment may cause serious injuries.

• Wear personal protective equipment (PPE).

Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.







	Danger due to burns (electric hazard)
	 When working on the electrical device, you may come in direct contact with defective and/or overloaded parts and get burns. Follow the corresponding safety regulations
$\underline{71}$	 Furthermore, only experts may maintain, modify or dismantle the switch cabinet.
	 Pay attention to the risk of electric arcs when pulling the NH1 isolator under the full load of the battery
	Prevent these hazardous situations. Otherwise, they may lead to insignificant or minor injuries.

1.2.7 Safety instructions for battery interiors

Target group

These safety instructions are intended for all persons who are authorised to work on battery modules of the battery storage system.

Adhere to the operating manual

Always follow the instructions in the operating manual and in the specifications when working on these modules.

Safety instructions for battery module

A DANGER
 Danger due to leaking electrolyte Only the trained experts and persons qualified and approved by BMZ Germany GmbH may work on the battery. Modifications or manipulations in the battery may lead to considerable safety risks and are therefore prohibited. Do not solder cables to the battery. Do not short circuit the battery. Never open, dismantle, drill and crush the battery. Never allow the battery to fall. Do not touch damaged batteries with bare hands. Lithium can cause severe skin burns. Handle damaged batteries with suitable safety equipment and tools. Do not use batteries that show discolouration, deformations, unusual noises or severe heat.
Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.



\Lambda DANGER
Danger due to leaking electrolyte The materials / mediums to be used for intended operation of the battery storage system are procured and used by the manufacturer of the system. The manufacturer is thus solely responsible for the proper handling of these materials / mediums and the associated hazards. Hazard and disposal instructions must be provided by the manufacturer. Follow the safety data sheets of material and medium manufacturers.
Prevent these hazardous situations. Otherwise, they will lead to deaths or serious injuries.

1.2.8 Safety instructions for fire prevention

Fire protection

Take essential precautions to respond efficiently in case of a fire.

Instructions for fire prevention

Pay attention to the following points:

Keep the fire extinguisher(s) in the immediate vicinity of the system. (Fire extinguisher of fire class D) Also keep in mind that poisonous vapours may be developed due to burning batteries and may hamper and damage the function of respiratory tracts.

Hazard due to fire

The battery storage system does not pose a fire hazard. In case of a fire in the system, avoid its spreading to other objects.

The battery storage system is de-energised at the time of delivery. Internal connection poles are always live. Therefore, ensure that a tool or a metallic object is not kept in the battery system. This could lead to a short-circuit and severe heat formation, which in turn could cause an explosion.

Actions to be taken in case of a damage



Safety



Damaged cells and battery

Contact the manufacturer. **Never** operate a potentially or obviously defective battery storage.

1.2.9 Explosion protection

General information

The battery storage system is de-energised at the time of delivery. Internal connection poles are always live. Therefore, ensure that a tool or a metallic object is not kept in the battery storage system. This could lead to a short-circuit and severe heat formation, which in turn could cause an explosion.

Explosive atmospheres

The battery storage system is not suitable for use in explosive atmospheres. Ensure that there are no ignition sources in the within a radius of 3 m around the system.

1.2.10 Residual risks

General information

The battery storage system was designed such that no persons are exposed to avoidable hazards. Special danger areas are secured using special safety devices.

Despite this, some danger areas still remain. When working on the battery storage system, you must be aware of these danger areas, the actions to be taken to keep the risk of injuries and material damage minimal.

This operating manual contains safety instructions to indicate these danger areas and essential actions to minimise the risks resulting from such danger areas.

1.3 Data and safety devices of the battery storage system

Safety instructions

The data and devices for the safety of the battery storage system are specified in this section.

1.3.1 General hazard instructions and pictograms

Overview

Adhere to the safety systems and safety instructions described in this operating manual. Keep the area around the battery storage system free from objects during operation to ensure that unhindered access is always possible.

Pulling the NH isolator disconnects all outside battery poles. Pay attention to the risk of electric arcs when pulling the isolator under the full load of the battery.

Explanation of warning symbols and pictograms

The following warning symbols have been affixed on the battery storage system to be able to ensure the safety of personnel and the battery storage system:



Symbol	Explanation
	Warning against general hazard sources.
Â	Warning against electric potential.
	Warning against combustible materials.
	Warning against risks posed by batteries.
	Warning against electric shock.
	Do not dispose with household waste. Please return the battery storage system to the manufacturer.

Figure 1-1: Hazard instructions, pictograms

1.3.2 Installed safety systems

Overview of safety systems of the battery storage system

Description	Position
NH isolator switch	• Connection area: outer housing
	Figure 1-2: battery storage system, side view of NH1 isolator

The externally accessible fuse elements (NH1) ensure the line protection and short-circuit protection.



1.3.3 Safety checks

General information

The following safety checks were conducted by the manufacturer in the factory.

Description	Position
Test scope	 Technical test of the battery management system for flawless scope of functions Check whether communication between the battery and the inverter functions. Cell voltage test Temperature sensor test
	Functional test of the battery at the inverter
	 Visual inspection of the finished product (outer housing)
	Check the complete delivery scope.



Function, delivery scope and technical key variables 2

2.1 **Function**

Overview

The BMZ ESS energy storage system stores electric energy in its electro-chemical intermediate storage. This energy can then be retrieved later to compensate the daytime-dependent difference between the power generation and power consumption.

In combination with a suitable inverter, the BMZ ESS system also offers an option of standby power function in case of a mains failure.

Thanks to the modular system, the required storage capacity can be flexibly arranged on the basis of the BMZ ESS system.

Delivery scope 2.2

Overview of standard delivery scope

The BMZ ESS battery storage system is delivered with the following components:

Description	Quantity
BMZ ESS	1
Quick Guide ESS 7.0 9.0 X Installation with Sunny Island Products	1
Information sheet on off-grid operation	1
Figure 2-1: delivery scope	

Figure 2-1: delivery scope

2.3 System overview

Battery storage system: Front view



Figure 2-2: battery storage system, front view



Battery storage system, side view



Position	Description
1	Battery housing
2	Removable side wall with an inspection window and NH1 fuses
3	Supporting feet (adjustable height)
4	Air suction

Figure 2-3: battery storage system, side view

Battery storage system, side view



Position	Description
1	Battery housing
2	Air suction
3	Supporting feet (adjustable height)

Figure 2-4: battery storage system, side view

Battery storage system, rear view



Position Description

- Battery housing
- Air outlet with fan
 - Supporting feet (adjustable height)
 - RS485 bus for multi-parallel mode
 - USB port
 - PLUS line with 50 mm²
 - CAN bus for inverter
 - MINUS line with 50 mm²

Figure 2-5: battery storage system, rear view

2.4 Rating plates and warning stickers

General information

The rating plate is provided on the rear side of the battery.



Figure 2-6: battery storage system, rear side



Position	Description
1	Manufacturer / address
2	QR code (contents: www.bmz-gmbh.de)
3	Safety instruction: Read the operating manual without fail before installation or usage
4	Safety instruction: Do not operate a defective battery
5	Safety instruction: The battery must not become wet.
6	Recycling instruction symbol
7	CE mark
8	Serial number
9	Manufacturing year/month
10	Product name
11	QR code (contents: serial number)
12	Safety instruction: various safety instructions

Figure 2-8: rating plate

Recycling symbol



Figure 2-10: battery storage system, recycling symbol

Detailed view



Figure 2-9: recycling symbol



2.5 Technical key variables

Product data

The following table describes the variants of the BMZ ESS system:

Battery storage	Unit	BMZ ESS 7.0	BMZ ESS 9.0	BMZ ESS X	BMZ ESS Z
Energy content	kWh	6.743	8.5	10.06	8.87
Usable energy content	kWh	5.4	6.8	8.05	7.1
Nominal capacity C10	Ah	121.5	156.6	186.3	162
Nominal voltage	V	55.5	54.0	54.0	54.75
Degree of efficiency at 25 °C	%	>95	>95	>95	>95
Cooling		active	active	active	active
Interfaces		CAN 2.0	CAN 2.0	CAN 2.0	CAN 2.0
Self discharge rate per month	%	1-3	1-3	1-3	1-3
Dimensions H/W/D	cm	appx. 46 x 64 x 48	appr. 46 x 64 x 48	appr. 46 x 64 x 48	appr. 46 x 64 x 48
Weight	kg	95	97	99	98
Certifications		UN 38.3; CE	UN 38.3; CE	UN 38.3; CE	UN 38.3; CE

Figure 2-11: overview of technical specifications



3 Transport

3.1 Safety instructions for transport

Target group

Safety instructions intended for the installation personnel who transport, install and put the BMZ ESS battery storage system in operation.

Safety instructions

For transporting the battery storage system and when working on electrical devices, please follow the safety instructions from the Safety section, page 10.

3.2 Transporting the battery storage system

Delivery of the battery storage system

Delivery

The battery storage system is packed in a mechanically robust, three-walled corrugated paper carton and delivered.

Incoming inspection

Check for the completeness using the delivery note.

Damage

Check the delivery for damage.

Visual inspection: e.g. damaged packing, scratches, dents, paint damage, missing components

If the delivery has been damaged during transport:

- Ask the forwarding agent to acknowledge obvious transport damage in writing and on the site.
- Contact the last forwarding agent immediately.
- Store the packing (for a possible inspection by the forwarding agent or for returning the product).
- Take photos for easier documentation.
- Write a short fault report.
- Never install or operate a potentially or obviously defective battery storage.

Check the goods at the time of acceptance

Before accepting the goods, check whether the shipment is complete and flawless. The operating manual contains an exact list of all components.

Before accepting the goods, check whether the carton is broken, deformed or destroyed. In such case, refuse the acceptance or accept only with conditions and a written confirmation of the forwarding agent.

Immediately check whether the test seal in the battery is intact. The inner housing of the battery has 3 test seals. If one test seal is destroyed, refuse to accept the goods.

If a test seal is destroyed, all guarantee and warranty claims for the product shall be void.

If the test seal is destroyed: Do not install or commission the energy storage system under any circumstance.



Rear side of the battery inner housing



Figure 3-1: seal position

Front side of the battery inner housing



Figure 3-2: seal position

Contents of the seal:

Version 1: Warranty is VOID if this seal is broken (black seal) Version 2: Warranty VOID if removed (silver seal)

Packing for return shipment

- If possible, use the original packing and the original packing material. •
 - If both are no longer available, request a packing company with experts or contact the manufacturer.
- Place the transport units on a pallet (it must be designed depending on the weight).
- Use the original packing material to protect the housing from scratches and transport damage. •

If you have queries regarding packing and transport safeguarding, please consult the battery manufacturer.

Contact	BMZ USA	BMZ Germany
Phone:	+1 757 821 8494	+49 (0) 6188 9956 9830
Email	Service.USA@bmz-group.com	CS.BigPack@bmz-group.com

Intermediate storage

Start using the battery within six months after delivery.

Storage conditions:

- Closed and dry room with a room temperature from +10 °C to +30 °C (temperatures below and above this range shorten the service life)
- Relative air humidity must be a maximum of 80% (non-condensing).
- Operating Manual ESS 7.0 | 9.0 | X | Z Document #30058-1



- The spatial distance from walls or other objects must be at least 50 cm.
- The battery storage system must be stored only in an upright position.
- Never clean the battery storage system or its immediate vicinity using a vapour jet or spray water. Dirt and water may enter the battery storage system and cause major damage.
- Before storing the lithium ion battery, inform your insurer.

After a storage time of a maximum of 6 months, execute an equalisation charge process for the battery as described in the operating manual of the battery inverter.

- If this is not done, batteries may get damaged.
- If this is not done, it will lead to consequential costs which will not be borne by BMZ.

The entire time of storage of batteries must be included in the usage duration.

Transport to the installation site (of the customer)

- Only the experts may carry out the transport in accordance with local conditions.
- The commercial installer is authorised to transport an energy storage unit without the ADR note for the transport of hazardous goods.
- The free limit for such "transports of hazardous goods" is 333 kg or 999 points (net weight of the hazardous product x 3 = points /ADR regulation). According to ADR, the identification of the vehicle is essential from 1000 points onwards ad the driver must have an ADR note.
- Every transport must be provided with an accompanying document (transport document as per ADR hazardous goods UN3480) irrespective of the points.

The transport units are transported on pallets and exclusively in original packages up to the customer's installation site. The product must be installed out of the reach of children and animals.



Transport with a sack truck

The sack truck must be designed for the weight of transport units.

Step	Description
1	Place the energy storage unit, with the contact with the rear wall, on the sack truck.







4 Installation, assembly and commissioning for the first time

General information

Only the experts trained by BMZ Germany GmbH may carry out the installation, assembly and first commissioning activities.

4.1 Installation site requirements

Installation site

The BMZ ESS battery storage system is only intended for usage in buildings. Usage of the battery only in non-living space. The battery housing has been designed for a stack of up to 3 battery storage systems. Use the structural analysis of the building to check whether it is designed for the load of the system. Each energy storage unit weighs approximately 99 kg. If three energy storage units are stacked on each other, intermittent loads of a maximum of 297 kg act on the floor.

The installation site must fulfil the following requirements:

- Levelled (e.g.: maximum setting range of adjusting feet)
- Dry (maximum air humidity 80%, non-condensing)
- Clean (well-swept, dust free)
- Vibration-free (maximum shock 0.5 g)
- No direct solar radiation
- No naked flames or other ignition sources near the installation place (minimum distance 3 m)
- Adequate distance (at least 20 cm) between the battery storage system and walls
- Adequate air circulation to dissipate the heat generated by the battery storage system.
- Below 2000-metre altitude.
- A maximum of three batteries can be stacked to tower.
- Protection from salty air

TOPVIEW



Figure 4-1 : Requirements for the installation site, distance of the ESS from walls, top view



SIDE VIEW



Figure 4-2 : Requirements for the installation site, distance of the ESS from walls, side view

The room air must not contain contaminations like suspended particles, metal dust or combustible gases. Ensure that the air humidity does not exceed 80%.

The room temperature should be in a range from 0 °C to 25 °C, wherein 15-20 °C are optimum for a long service life.

- Operate the battery storage system only in the upright position.
- Ensure that the service flap at the side (NH1 fuses) is always freely accessible.

Install the battery inverter and the battery storage system near each other. Do not lay the connecting cable between the battery and the inverter in windings. The maximum length of this cable is 2.3 m. Only use the provided original cable.

- Do not shorten the cable arbitrarily.
- Do not extend the cable arbitrarily.
- Do not lay the cable in loops.

Immediate surroundings of the battery storage system

The immediate surroundings of batteries must be clean and dry. Oil contaminations, dirt or water residues must not be found outside the battery. If contaminations are found, remove them immediately. Additional information regarding this is given in: *VDE 0510 Part 2: 2001-12, EN 50272-2: 2001 "Safety requirements for batteries and battery systems – part 2: stationary batteries"*.

4.2 Filling the installation check list

The installer must fill the installation check list carefully; it shall be valid only with a signature and the company stamp. Store the completed installation check list carefully. In the annexe you will find a form of the installation check list. Warranty and guarantee claims against the manufacturer can only be made if the completed installation check list is submitted together with the warranty card and the original proof of purchase.

Document #30058-1



4.3 Installation of the battery storage system

Installation steps

Proceed as follows to install the battery storage system:

Step	Description
1	Unpack the battery storage system carefully and check it for transport damage. In case of transport damage, contact the forwarding agent or the manufacturer immediately. To not use a knife to open the packing.
2	Check whether all structural parts and accessories exist.
3	Check whether the battery storage system has been switched off. Both LEDs must not light up. Use a voltmeter to measure the DC voltage.
4	Bring the battery storage system on the pallet to the installation place using suitable transport aids.
5	Check whether the current isolator (NH isolator) is pulled. Figure 4-3: representation of the pulled current isolator.
6	Use a suitable lifting device to lift the battery storage system from the pallet (e.g. workshop crane).
7	Position the battery storage system on the installation site. Adhere to the minimum distances from walls. (See section 4.1 Requirements for the installation site)

4.4 Preparing the electrical connections for the single mode

Definition of single mode

Single mode means the operation of **one** BMZ ESS energy storage system with **one** inverter.

Safety instructions

Please follow the safety instructions in the Safety section, page 10.

Establish the connections between the inverter and the battery

Pre-conditions:

- The current isolator (NH isolator) must be pulled
- The battery inverter must be switched off ("Off")



Check for the correct polarity carefully before establishing connections. Connection lines are marked in different colours:

- Plus pole = RED
- Minus pole = BLACK

The connection of a battery with an SMA Sunny Island inverter is described below as an example.

- When using another inverter, please follow the specifications in the corresponding manufacturer's documentation.
- Check whether the inverter used by you is approved for use with the BMZ ESS battery storage system.

Step	Description
1	Push the 50 mm ² lines through metric screw joints into the housing of the inverter.
	Minus pole = BLACK
	Figure 4-4: inverter, connection area for battery lines
	The 50 mm ² connection lines must NOT be connected to incorrect poles.
	Follow the installation manual of the inverter manufacturer.
2	Connect the power cable of the battery inverter to the poles of the NT isolator.
	Figure 4-5: sample representation of the connection of plus and minus power cables with the SMA Sunny Island
	Ensure that the contact surface of cable shoes rests completely.
	Maximum tightening torque: 12 Nm. (Tolerance +/- 5 Nm)



3 Connect the CAN communication cable between the inverter and the battery storage system. For this purpose, patch the patch cable (RJ45) from the CAN socket of the battery storage system to the CAN socket of the inverter. (Marked in yellow)



Figure 4-6: representation of external connections of the battery system, CAN


Insert the NH fuses in the cover of the NH isolator. 4



Figure 4-7: battery storage system, side view of the opened housing

Change the fuse inserts depending on the inverter to which the battery is connected.

Recommendation:	
SI3.0M-11:	80 A
SI4.4M-11:	100 A
SI6.0H-11:	160 A
SI8.0H-11:	200 A



Figure 4-8: representation of the correctly inserted fuses



5 Insert the housing cover in the housing and tighten the screws of the cover. For this purpose, use one DIN 7985 M4x6 fillister-head screws. Fix these using a PH2 Phillips screwdriver and a maximum tightening torque of 2.5 Nm (tolerance: +/-0.1 Nm).



Figure 4-9: battery storage system, side view

The cover may remain open during the first installation in order to switch on the battery. Close the cover after switching on the battery

Execute the first commissioning process by following the specifications from the Operation section (page 71).

Configure the parameters of the inverter as mentioned in section 4.17 (Recommended parameters).

Ensure that the batteries are not earthed by mistake. If they are earthed, disconnect the corresponding connection.

Check all parts for firm fitting. Re-tighten all screws and terminals.

4.4.1 Checking the connections

6

7

Check the connections as per the exact specifications in the installation check list given in the annexe.

4.4.2 Switching the battery storage system on and off

The battery storage system and the inverter must be correctly installed before they can be put into operation.

Switch on the battery storage system using a switch

Proceed as follows to start the battery storage system:



Step	Description
1	Open the screws on the service flat using a PH2 screwdriver.
2	Check whether the NH isolator is equipped with correct (see section 4.5) NH fuses and put into operation correctly.
3	Check the connections of the DC power cable (+, -) and the CAN communication cable of the battery inverter.
4	Actuate the push button through a short (longer than 1 second) push.
5	 Check the LED status of the battery storage system. The green LED flashes quickly (every 100 msec): The pre-charging path is activated and charges the capacitors of the inverter. (The pre-charging time depends on the type and number of connected inverters. The pre-charging time can take from 30 seconds to 2 minutes) Both LEDs flashes slowly (every 1 second): The battery is active and waits for communication through the inverter. The battery switches off automatically after 20 minutes if there is no communication between the battery and the inverter. Additional information regarding the LED flashing patterns is given in the Pilot lamps section, page 72.
6	Switch on the battery inverter. • The green LED lights up continuously If there is no communication between the battery storage system and the inverter, the battery switches off automatically after 20 minutes to avoid erroneous operating modes. Both LEDs flash in a one-second cycle if there is no communication.

Switch on the battery storage system using an external voltage source

Proceed as follows to start the battery storage system:

Step	Description
1	The external voltage source can be used to switch on the system only if it was not switched off using the push button (press the push button longer than 10 seconds at a stretch).
2	Connect an external voltage source greater than 36 VDC.
3	The battery detects the external voltage source automatically and switches the operating mode from inactive to active.
4	If it is switched on in an unauthorised manner, the green LED flashes quickly (100 ms flash cycle) You must now start the battery using a normal switch-on sequence (by pressing the push button longer than 1 second).

Switch off the battery storage system using a push button

Proceed as follows to switch off the battery storage system:



Step	Description
1	Open the screws on the service flat using a PH2 screwdriver.
2	Keep the switch-on button pressed for at least 10 seconds.
3	After approximately 8 seconds, both LEDs start flashing quickly (100 ms flash cycle).
4	The LEDs switch off. The battery storage system is now switched off.

Switch off the battery storage system using time

The battery switches off automatically after a defined time of 20 minutes when the battery does not detect any CAN communication externally.

Step	Description
1	If an external source (e.g. the battery inverter) does not detect a CAN communication of the
	battery, the battery switches off automatically after 20 minutes.

4.4.3 Configuring the parameters of the inverter

The inverter parameters must be configured for the BMZ ESS battery in order to operate it optimally in combination with the inverter.

See section 4.18

4.5 Preparing the electrical connections for the parallel mode

Definition of parallel mode:

Parallel mode means the operation of **multiple** BMZ ESS energy storage systems at **one or more** inverters.

Safety instructions

Please follow the safety instructions in the Safety section, page 10.

The following safety instructions are additionally applicable for the parallel operation:

- If the battery is operated under full load, housing parts and lines may generate heat.
- When wiring the batteries, ensure that a short-circuit is never formed between the plus and minus poles of one or more batteries. There is a risk of life.
- When laying the lines, do not extend them from the plus and minus poles.
- When laying the lines (plus and minus poles), ensure that they are not rolled.

Establish the connections between the inverter and the battery

Pre-conditions:

- The current isolator (NH isolator) of each battery must be pulled
- The battery inverter must be switched off ("Off")
- Use a suitable switch cabinet to connect the batteries in the parallel circuit to the inverters. BMZ recommends using a DC busbar with a suitable line fuse for each connected line.



BMZ recommends using products of SMA (Bat fuse) or Enwitec (BAT BREAKER BOX)

Check for the correct polarity carefully before establishing connections. Connection lines are marked in different colours:

- Plus pole = RED
- Minus pole = BLACK

Prerequisites for the battery firmware version

Batteries can be connected in parallel from firmware version V2.00 onwards.

The BMZ Service Tool in a specific version (at least Version 0.0.26) must be used to update the battery to a new firmware version.

Requirements for the battery inverter

The parallel connection capability of BMZ ESS batteries is approved only with the battery inverters of SMA Sunny Island.

Check whether the inverter used by you is approved for use with the BMZ ESS battery storage system.

4.6 Connection concept of multiple BMZ ESS batteries with one or more battery inverters

4.6.1 Communication

Wiring of the communication line from the battery to the inverter

- Connect the CAN cable to the battery that has been configured as the master and connected with the inverter.

Wiring of the communication line from between the batteries (internal communication of battery)

- All batteries in the parallel circuit are connected with each other via the RS485 bus for internal communication between them. The batteries are connected in a bus topology. For this purpose, T-connectors (or even Y-adapters) are used at the RJ45 sockets ("INTERNAL" label) of batteries.
- One T-connector (or even a Y-adapter) is used for each battery.





Figure 4-10: communication cabling, ESS parallel connection

- The RS485 bus must be closed with 120 Ohm at both ends

Example of a RJ45 T-connector (or even a Y-adapter) with corresponding pin assignment



Figure 4-11: RJ45 Y-adapter (even RJ45 T-connector)



Figure 4-12: pin assignment of RJ45 Y-adapter (T-connector)

Document #30058-1



4.6.2 Contacting power cables

Safety

	ATTENTION
	Risk of battery damage
	When switching on the battery, a wrong connection can cause a short circuit which destroys the battery fuse.
	When wiring the Bat Breaker Box (output rail):
	 Connect Pack PLUS only to Pack PLUS potentials.
	 Connect Pack MINUS only to Pack MINUS potentials.

Important:

When interconnecting the output contacts, all fuses (NH1 isolators) of individual batteries and the switch cabinet are **removed**, and the **automats** in the BAT BREAKER Box are set to **OFF**.



Figure 4-13: battery storage system, side view, power isolator pulled

Important:

Please refer to the installation manual "Batterie-Absicherung "BAT BREAKER' Typ ..." by the company enwitec elctronic for additional instructions regarding installation and operation.



Laying the power cables

- The power cable should be as short as possible.
- The length of the Pack+ and Pack- cables must not exceed the respective maximum lengths.
- Cables of each battery (plus and minus poles) must always have the equal length.
- Cables of a battery connected in a parallel circuit must have the equal length between the batteries.



Figure 4-14: cable lengths of the ESS system

Connecting the power cables

- All plus poles of batteries must be connected to a copper rail using the Bat Breaker Box.
- All minus poles of batteries must be laid on a copper rail using the Bat Breaker Box.





Figure 4-15: output cable of BAT Breaker Box





Figure 4-16: BAT BREAKER Box of Enwitec (example for 6 batteries and 3 inverters) with a closed housing





Figure 4-17: BAT BREAKER Box of Enwitec (example for 6 batteries and 3 inverters) with an open housing



4.7 Configuration of the ESS parallel mode

Thanks to the modular concept of the BMZ ESS system, different configurations of BMZ ESS batteries with SMA Sunny Island inverters are possible.

4.7.1 1-phase operation of a SMA Sunny Island inverter on 1 ESS battery



Figure 4-18 : 1-phase operation on 1 ESS battery

4.7.2 1-phase operation of a SMA Sunny Island inverter on 2 ESS batteries



Figure 4-19: 1-phase operation on 2 ESS batteries



4.7.3 1-phase operation of a SMA Sunny Island inverter on 3 ESS batteries



Figure 4-20: 1-phase operation on 3 ESS batteries



4.7.4 3-phase operation of a SMA Sunny Island inverter on 3 ESS batteries



Figure 4-21: 3-phase operation on 3 ESS batteries



4.7.5 3-phase operation of a SMA Sunny Island inverter on 4 ESS batteries



Figure 4-22: 3-phase operation on 4 ESS batteries



4.7.6 3-phase operation of a SMA Sunny Island inverter on 5 ESS batteries



Figure 4-23: 3-phase operation on 5 ESS batteries



3-phase operation of a SMA Sunny Island inverter on 6 ESS batteries 4.7.7



Figure 4-24: 3-phase operation on 6 ESS batteries



4.7.8 3-phase operation of a SMA Sunny Island inverter on 9 ESS batteries



Figure 4-25: 3-phase operation on 9 ESS batteries



4.7.9 3-phase operation of a SMA Sunny Island inverter on 12 ESS batteries



Figure 4-26: 3-phase operation on 12 ESS batteries



4.8 Configuration of the ESS battery

4.8.1 System structure

- In a complete system of batteries connected in parallel, configure one battery as a "master".
- In a complete system of batteries connected in parallel, configure **all other batteries** as "**slave**".
- You can connect up to 6 batteries with each other in parallel.

4.8.2 Addressing the batteries

Configure each battery with an unambiguous and unique address.
 Numbers 1 to 12 are available.
 Note: Each battery must have a different bus address (device address)

Note: Each battery must have a different bus address (device address). Note: Do not use Device address "0".

4.9 Definition of the battery mode during commissioning and parameter configuration



Figure 4-27: representation of the BMZ ESS service tool

4.9.1 Single:

This is the delivery status of every BMZ ESS battery ex-works. The mode is used for the status: 1 BMZ ESS battery operated with one SMA Sunny Island inverter.

4.9.2 Master:

This is the status of a BMZ ESS battery in a group of multiple BMZ ESS batteries connected in parallel. **Important**: Only one battery may be configured as a master.

The mode is used for the status: multiple BMZ ESS batteries are operated with one or more SMA Sunny Island inverters.

4.9.3 Slave:

This is the status of multiple BMZ ESS batteries in a group of multiple BMZ ESS batteries connected in parallel. **Important:** Each battery, except the master battery, must be configured as a slave battery. The mode is used for the status: multiple BMZ ESS batteries are operated with one or more SMA Sunny Island inverters.



4.10 Work step sequence to configure the parameters of batteries

Execute the following steps to configure the parameters of batteries for a system comprising ESS batteries connected in parallel.



Figure 4-28: representation of the work sequence to configure the parameters of a BMZ ESS battery



4.11 Work step sequence to commission the batteries

Execute the following steps to commission a system comprising ESS batteries connected in parallel.



Figure 4-29: representation of the work sequence to commission a BMZ ESS battery

4.12 Configuration of firmware for parallel mode

Use the BMZ service tool to configure the battery using the USB service port. The following files must be available to configure the battery parameters:

- 1. ESS30ServiceTool.exe (example: current service tool V0.0.26)
- 2. System.Windows.Interactivity.dll
- 3. Optional for firmware update: 31502A_V206.flash (example: current firmware V2.06)



Important: All three files must be in the same folder.

Name	Änderungsdatum	Тур	Größe
31502A_V203.flash	22.03.2016 14:13	FLASH-Datei	113 KB
ESS30ServiceTool.exe	01.04.2016 15:04	Anwendung	3.157 KB
System.Windows.Interactivity.dll	26.02.2016 15:50	Anwendungserwe	55 KB

Figure 4-30: file structure of the BMZ ESS service tool

4.12.1 Setting the master battery mode

In a group of multiple BMZ ESS batteries connected in parallel, configure **one battery** as a **master**. **Important:**

- 1. Set the "Master" mode and configure the battery parameters by clicking on "set mode".
- 2. In a group of multiple BMZ ESS batteries connected in parallel, **only one battery** may be configured as a master.

ESS 3.0 BATTERY SERVICE TOOL		- 8 ×
read from Lattery pack read from Lattery pack read from Lattery pack read from Lattery pack set mode set address	Device Mode Device Address 1 + Device Address 0 Devices with cosed awitch 0 Fully charged devices 0	Device Mode: Single Mode Master Mode Slave Mode
THE INNOVATION CROUP	I VOLTAGES TEMPERATURES TIME LOG FRAMMARE FLAGS SERVICE SETTINGS	REPORT Rev. 6.0.23.27079

Figure 4-31: representation of configuration of the parameters of a BMZ ESS battery

3. **IMPORTANT:** Configure the parameters of the battery with the lowest voltage level and the lowest charge status as the master battery.

4.12.2 Setting the master battery address

- Address 0 is the default address. Do not use Address 0. Type in + or to get to device address 1 or higher.
- Each battery connected in parallel must have an unambiguous and unique address (device address).
- The master and slave batteries function only with the addresses configured with numbers from 1 to 12.



ESS 3.0 BATTERY SERVICE TOOL		- 8 X
	PARALLEL CONNECTION	
read from battery pack	Device Mode: Single Mode	
	Master Mode	
	Slave Mode	
set mode		
	Detected devices: 0	
	Devices with closed switch: 0	
set address	Fully charged devices: 0	
		_
[]:]]///_ (i) (4) (1) (1) (1) (1) (1) (1) (2) (2) (2) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1	
THE INNOVATION GROUP		
BATTERY	INFO VOLTAGES TEMPERATURES TIME LOG FIRMWARE FLAGS SERVICE SETTINGS PARALLEL REPORT	Rev. 0.0.23.27079

Figure 4-32: representation of configuration of the parameters of a BMZ ESS battery

Important:

- 1. Set the "address" (device address) to "1" and configure the battery parameters by clicking on "set address".
- 2. In a group of multiple BMZ ESS batteries connected in parallel, **only one battery** may have the address "1".
- 3. If you use device address "1" please make sure that you typed in "+" and "-" before so that "1" will be recognized from the battery BMS.

4.12.3 Setting the slave battery mode

In a group of multiple BMZ ESS batteries connected in parallel, configure all batteries, except the master, as slaves. **Important:**

1. Set the "Slave" mode and configure the battery parameters by clicking on "set mode".

ESS 3.0 BATTERY SERV	CE TOOL – 🖉 🗙
	PARALLEL CONNECTION
	Device Mode: 🔿 Single Mode
read from battery pack	Master Mode
	Slave Mode
set mode	DEVICE HOUTESS: 2 T
	Detected devices: 0
set address	Devices with closed switch: 0
ber daness	Fully charged devices: 0
THE INNOVATION GROUP	BATTERY INFO VOLTAGES TEMPERATURES TIME LOG FIRMWARE FLAGS SERVICE SETTINGS PARALLEL REPORT
	Rev. 0.023.27079.

Figure 4-33: representation of configuration of the parameters of a BMZ ESS battery



4.12.4 Setting the slave battery address

- Address 0 is the default address.
- Each battery connected in parallel must have an unambiguous and unique address (device address).
- The master and slave batteries function only with the addresses configured with numbers from 1 to 12.

ESS 3.0 BATTERY SERVICE TOOL		_ @ X
	PARALLEL CONNECTION	
	Device Mode: Single Mode	
read from battery pack	Master Mode	
	Slave Mode	
set mode	Device Address: 2 + -	
	Detected devices: 0	
set address	Devices with closed switch: 0	
	Fully charged devices: 0	
BMZ THE INNOVATION GROUP	/ / I © © I / × × (I) I	
BATTERY	INFO VOLTAGES TEMPERATURES TIME LOG FIRMWARE FLAGS SERVICE SETTINGS PARALLEL REPORT	Rev. 0.0.23.27079

Figure 4-34: representation of configuration of the parameters of a BMZ ESS battery

Important:

- 1. Set the "address" (device address) to "2" and configure the battery parameters by clicking on "set address".
- 2. In a group of multiple BMZ ESS batteries connected in parallel, **only one battery** may have the address "2".
- 3. Configure a unique and unambiguous address (device address) for all other slave batteries.

4.13 Commissioning the parallel connection of multiple batteries

4.13.1 Switch-on sequence

- 1. At the time of commissioning, first switch on the master battery.
- 2. Check whether the main relay of the master battery is switched on
 - ⇒ Check via LED flashing speed (see section 5.1) or BMZ service tool (see section 4.4)
- 3. If the main relay of the master battery is closed, you can now switch on other slave batteries.

4.13.2 Stand-by mode of a slave battery:

When you switch on the slave batteries, the batteries are automatically in the stand-by mode. (The stand-by mode is indicated by a green flashing LED) Only when the master sends a switching signal for the main relay of the slave battery, the main relay of the slave battery is switched on. The slave battery can be used the complete battery system only after this.

4.13.3 Switch-on criterion of the slave battery:

Each battery compares the internal battery voltage with the externally applied voltage through a measurement.





Figure 4-35: block circuit diagram of the BMZ ESS slave battery

If the voltage automatically measured by the battery at the master battery differs from the slave battery voltage by less than +/-100 mV, the slave battery switches off automatically.

Important:

To ensure that all slave batteries are activated from the master battery in case of a different voltage level for different batteries, change the charge status of the master battery by charging and discharging using the inverter.

Within a full cycle (i.e. the battery is completely charged once and completely discharged once), the master battery scans all slave batteries in the stand-by mode and switches them off one by one.

This process may take a few hours depending on the available PV energy or loads in the company network.

4.13.4 Example 1:

6 batteries connected in parallel with different charge statuses:

- The master battery is switched on and the main relay is switched on
- 2 slave batteries are switched on and the main relay is switched on
- 3 slave batteries are switched on and the main relay is NOT switched on •



Figure 4-36: representation of example 1, different SOC of BMZ ESS batteries connected in parallel



4.13.5 Example 2:

6 batteries connected in parallel with different charge statuses:

- The master battery is switched on and the main relay is switched on
- 4 slave batteries are switched on and the main relay is switched on
- 1 slave battery is switched on and the main relay is NOT switched on



Figure 4-37: representation of example 2, different SOC of BMZ ESS batteries connected in parallel

4.13.6 Example 3:

6 batteries connected in parallel with different charge statuses:

- The master battery is switched on and the main relay is switched on
- 5 slave batteries are switched on and the main relay is switched on



Figure 4-38: representation of example 3, different SOC of BMZ ESS batteries connected in parallel



4.14 Checking the parallel connection of multiple batteries

4.14.1 Check the number of connected (detected) batteries

- Connect the notebook to the master battery.
- The "Detected devices" number shows the number of batteries connected to the master (and that are in the stand-by mode).

ESS 3.0 BATTERY SERV	ice tool – 🖉 🗡
J	PARALLEL CONNECTION
	Device Mode: 💿 Single Mode
read from battery pack	Master Mode
	Slave Mode
set mode	Device Address: 1 +
	Detected devices: 0
set address	Devices with closed switch: 0
BMZ	i 🗲 🌡 😇 🕮 🖪 🕨 🗶 😴 🚍 🗋
THE INNOVATION GROUP	BATTERY INFO VOLTAGES TEMPERATURES TIME LOG FEMMUARE FLAGS SERVICE SETTINGS PARALLEL REPORT

Figure 4-39: check the number of BMZ ESS batteries connected in parallel

Other test criterion: The LED of a battery in the stand-by mode flashes green.



4.14.2 Check the number of batteries for which the main relay is closed

- Connect the notebook to the master battery.
- The "Devices with closed switch" number shows the number of batteries connected to the master for which the main relay is closed.
- These batteries are connected in parallel to the master battery and can thus be used in the complete system (charging and discharging).

ESS 3.0 BATTERY SERVICE TOOL		_ & ×
	PARALLEL CONNECTION	
(🖤)		
	Device Mode:	
read from battery pack	Master Mode	
	Slave Mode	
set mode	Device Address: 1 +	
	Detected devices: 0	
	Devices with closed switch: 0	
set address	Fully charged devices: 0	
THE INNOVATION GROUP	BATTERY INFO VOLTAGES TEMPERATURES TIME LOG FERMINARE FLAGS SERVICE SETTINGS PARALLEL REPORT	
		Rev. 0.0.23.27079

Figure 4-40: check the number of BMZ ESS batteries connected in parallel

Other test criterion: The LED of a battery in the parallel mode (active) continuously lights up in green.

4.15 Adding new batteries

BMZ allows subsequent extensions of the battery system until six months after the first installation.

- 1) Configure a new battery as a slave
- 2) Disconnect the NH isolator of the output rail
- 3) Disconnect the NH isolator of the battery
- 4) Connect the power cable of the slave battery to the output rail.
- 5) If the new slave battery is switched on, switch it off by pressing the button for 10 seconds (LEDs must be off)
- 6) Connect the NH isolator of the battery
- 7) Connect the NH isolator of the output rail
- 8) Switch on the slave battery using the button (press the button for > 1 second, LEDs flash)

After adding a new battery, you may still need to deal with the equalising currents. This may lead to the adjustment of the capacity even if no current flows from or to the inverter.

4.16 Checking the connections of parallel battery systems

Check the connections as per the exact specifications in the installation check list given in the annexe.

4.16.1 Switching the battery storage system on and off

The battery storage system and the inverter must be correctly installed before they can be put into operation.



Switch on the battery storage system using a switch

Proceed as follows to start the battery storage system:

Step	Description		
1	Open the screws on the service flat using a PH2 screwdriver.		
2	Check whether the NH isolator is equipped with correct (see section 4.5) NH fuses and put into operation correctly.		
3	Check the connections of the DC power cable (+, -) and the CAN communication cable of the battery inverter.		
4	Actuate the push button through a short (longer than 1 second) push.		
5	 Check the LED status of the battery storage system. The green LED flashes quickly (every 150 msec): The pre-charging path is activated and charges the capacitors of the inverter. (The pre-charging time depends on the type and number of connected inverters. The pre-charging time can take from 30 seconds to 2 minutes) For slave batteries: The green LED flashes slowly (every 1 second): The battery is active and waits for the switch-on signal of the master battery. Both LEDs flashes slowly (every 1 second): The battery is active and waits for communication through the inverter. The battery switches off automatically after 20 minutes if there is no communication between the battery and the inverter. Additional information regarding the LED flashing patterns is given in the Pilot lamps section, page 72. 		
6	Switch on the battery inverter. • The green LED lights up continuously If there is no communication between the battery storage system and the inverter, the battery switches off automatically after 20 minutes to avoid erroneous operating modes. Both LEDs flash in a one-second cycle if there is no communication.		
7	 Important: (see chapter 4.14.1) At the time of commissioning of batteries connected in parallel, first switch on the master battery. 1. Check whether the main relay of the master battery is switched on -> Check via LED flashing speed (see section 5.1) or BMZ service tool (see section 5.2) 2. If the main relay of the master battery is closed, you can now switch on other slave batteries. 		
	none of the batteries allow switching off the main relay.		



Switch on the battery storage system using an external voltage source

Proceed as follows to start the battery storage system:

Step	Description
1	The external voltage source can be used to switch on the system only if it was not switched off using the push button (press the push button longer than 10 seconds at a stretch).
2	Connect an external voltage source greater than 36 VDC.
3	The battery detects the external voltage source automatically and switches the operating mode from inactive to active.
4	If it is switched on in an unauthorised manner, the green LED flashes quickly (100 ms flash cycle) You must now start the battery using a normal switch-on sequence (by pressing the push button longer than 1 second).

Switch off the battery storage system using a push button

Proceed as follows to switch off the battery storage system:

Step	Description
1	Open the screws on the service flat using a PH2 screwdriver.
2	Keep the switch-on button pressed for at least 10 seconds.
3	After approximately 8 seconds, both LEDs start flashing quickly (100 ms flash cycle).
4	The LEDs switch off. The battery storage system is now switched off.

Switch off the battery storage system using time

The battery switches off automatically after a defined time of 20 minutes when the battery does not detect any CAN communication externally.

Step	Description
1	If an external source (e.g. the battery inverter) does not detect a CAN communication of the battery, the battery switches off automatically after 20 minutes.
2	Optional: If the battery is installed in parallel mode , the battery defined as master first switches off after 20 minutes without CAN communication of the external source. The slave battery then switches off after 20 minutes. If a master or a slave battery is now switched on in the parallel mode, all batteries in the complete system are switched on since they are activated by the pre-charging voltage of the battery that is switched on first (see Switching on the battery storage system using an external voltage source



4.16.2 Configuring the parameters of the inverter

The inverter parameters must be configured for the BMZ ESS battery in order to operate it optimally in combination with the inverter.

See section 4.18

4.17 Recommended parameters of the inverter

To ensure the optimum working range of the battery and to optimise the quantity of storable energy, BMZ recommends the following parameters for the inverter.

A detailed description of parameters is given in the operating manual of your SMA Sunny Island inverter.

4.17.1 SMA Sunny Island with Sunny Control Module

Default settings

- 1. Enter the following values in the quick configuration guide during the basic configuration of the Sunny Island inverter (see the documentation of the system):
 - Battery type BatTyp: Lilon_Ext-BMS
 - Battery capacity BatCpyNom: For Ah values see type plate on the battery's backside (C10). Multiply the value for each battery in parallel.
- After the basic configuration of the Sunny remote control, turn the knob and select the input page password (1/1).

1 Password	<1∕1>₽
Level	User
9 Password	<1∕1>
Set	10 ≠
Runtime	1234 h

- 3. Press the knob. This will take you to the input page.
- 4. Calculate the checksum of the **Runtime** operating hours. Determine the installer password.
 - Example: The Runtime operating hours are 1234 h. The checksum is the sum of all digits: 1 + 2 + 3 + 4 = 10
- 5. Select **Set** on the Sunny remote control and press the knob.
- 6. Set the determined installer password and press the knob. The Sunny remote control is in the installer mode.
- 7. Select the **700# Operator Level** menu and press the knob.
- 8. Select the **700.01 ActLev** parameter, press the knob and set to **Expert**.

Installer 100# Meters ≁ 200# Settin9s 300# Dia9nosis
Installer 500# Operation 600# Direct Access 700# Operator Level↓
Operator Level 700#01 <set>↓ ActLev Expert</set>

- 9. Confirm the **<accept Y/N>** query with **Y**.
- 10. Set parameters for on-grid operation (Figure 4-41) or off-grid operation (Figure 4-42):

1%

5 %

89 %

for self-consumption



in Sha application optimized for sen consumption			
Number	Name	Systems optimized for self- consumption	Backup power systems optimized for self-cons
261.03	Saisonenable	No	No
262.01	ProtResSOC	3 %	3 %
262.02	BatResSOC	2 %	2 %

Not available

5 %

90 %

On-grid application optimized for self-consumption

MinSlfCsmpSOC Figure 4-41: SMA Parameter on-grid with Sunny Control Module

BUResSOC

PVResSOC

Off-grid application

262.03

262.04

262.05

In expert mode, the following parameters should be set when installing the inverter:

Number	Name	Value
235.xx	Diesel Generator	12 % SOC
	Start	
242.xx	Load Shedding	10 % SOC
223.07	Bat Pro 3	3 % SOC
223.06	Bat Pro 2	5 % SOC
223.05	Bat Pro 1	7 % SOC

Figure 4-42: SMA Parameter off-grid with Sunny Control Module

4.17.2 SMA Sunny Island from series 12 without Sunny Control Modul

Access to the system

See description of SMA. Please note your password.

Settings in the Quick Configuration Guide

During the basic configuration of the Sunny Island, enter the following values in the Quick Configuration Guide (see system documentation):

- Type: Lithium-Ion (Li-Ion)
- Nominal Capacity (Ah): Capacity according to nameplate, x pcs of ESS in parallel

Menu Device Parameters		Parameter	Systems optimized for self- consumption	Backup power systems optimized for self- consumption
Battery	Areas of use	Seasonal operation active	No	No
	Lower limit of the deep discharge protection range before switch-off	3 %	3 %	
		Minimum width of the deep discharge protection area	2 %	2 %
		Minimum width of the equivalent current range	Not available	1%
		Width of range for maintaining battery state of charge	5 %	5 %
		Minimum width of the internal consumption area	90 %	89 %

On-grid application with self-consumption optimization

Figure 4-43: SMA parameter on-grid without Sunny Control Module

Off-grid applikation

Menü Device Parameters		Parameter	Wert
Batterie Schonbetrieb		Battery state of charge limit [A]	7 %
		Battery state of charge limit [B]	5 %
		Battery state of charge limit [C]	3 %
Device	load shedding 1	Battery state of charge limit for start	10 %
Generator	Generator request via state of charge	switch-on limit	12 %

Figure 4-44: SMA parameter off-grid without Sunny Control Module

4.17.3 Learning cycle

In order to optimize its efficiency, the battery automatically undergoes a learning cycle to determine the usable capacity.

During the learning cycle, the battery should go through the SOC limits 100 % and 12 % as often as possible.

The learning cycle starts at 100 % SOC and ends at 12 % SOC. If both events occur sequentially and no more than 20 % SOC energy has been charged in between, the learning cycle is considered "successfully completed".

The more often this learning cycle is completed, the more precise is the SOC calculation.

The more often this learning cycle is completed, the more energy the battery can store and release.



5 Operation and service software

General safety instructions

Please follow the safety instructions in the Safety section, page 10.

5.1 Pilot lamps (LED)

5.1.1 LED indicators on the battery module

The pilot lamps on the battery module indicate the possible statuses and incidents in the operation of the battery storage system.

Colour	Flashing frequency	Function	
pattern			
OFF	OFF	The battery is switched off	
Green + Red	Continuously lit up	Service mode (a PC is connected)	
	Quick flashing	The battery is in error mode	
	(100msec)	The relay is tripped and cannot be switched on	
		For example, the temperature is too high	
		For example, the temperature is too low	
		 For example, charge status of battery is too low 	
		Please contact the BMZ Service immediately (see section (7))	
	Slowly flashing	The battery is switched on, but no communication with the inverter.	
	(1sec)	• (Countdown of 20 minutes until the battery is switched off)	
Green Continuously lit up The battery is switched on (normal mode		The battery is switched on (normal mode)	
		The relay is pulled	
		 The inverter is fed via Softstart (pre-charging branch) 	
		No error	
	Slowly flashing	Pre-charging is activated. (Normal mode)	
	(1sec)	 The pre-charging path for charging the capacitors of the inverter is activated 	
		The relay is still not pulled	
	Slowly flashing	SLAVE battery (normal mode)	
	(1sec)	 The pre-charging path for charging the capacitors of the inverter is activated 	
		• The relay is still not pulled (master not active)	
		• The battery is in stand-by mode and switches off	
		automatically as soon as the master is activated.	
Red	Quick flashing	The battery is in error mode	
	(100ms)	The relay is tripped and cannot be switched on	
		The 2nd protection switch element (Pyrofuse) has tripped	
		Please contact the BMZ Service immediately (see section (7))	

Figure 5-1: Pilot lamps table (LED)



5.1.2 Charging status indicator

The charging status indication is given using the communication line via the inverter.

5.2 Connection of the notebook for servicing

5.2.1 USB port

Each rechargeable battery set has a USB port.

The installer can use this port to execute the following steps:

- Update (firmware)
- Read error memory

Proceed as follows to read the battery storage system via the USB port:

Description
Open the screws on the service flat using a PH2 screwdriver. Loosen and remove the upper fillister-head screw of the lateral service flap.
Figure 5-2: side view of BMZ ESS, service flap
Now push the flap of the side panel upwards to remove it.
Switch off the battery system. Figure 5-3: push button with LEDs
Both LEDs must not light up.
Pull out the NH fuses of the NH isolator and remove the safety bracket and fuses from the isolator.
Connect the notebook to the battery storage system. Connect the USB A cable of the notebook to the USB A port of the battery storage system.

Figure 5-4: USB communication




5.2.2 Service software

The software is easy to operate and works with all commonly used Windows versions. The following functions are possible

- Read battery status (cell voltages, temperatures)
- Firmware update
- Configuration of the battery for parallel mode
- Download log files (for sending to the Service Department via email)
- Prepare PDF report (actual status of the battery)

For more information regarding the service software, please refer to the operating manual of the BMZ service tool. It is a separate document.

Please contact BMZ Germany GmbH for this purpose.



6 Fault/damage event

6.1 Fault indicators

6.1.1 Fault indicators of pilot lamps

Fault indicators of pilot lamps

Two LEDs are provided on the battery storage system.

In case of errors in the battery storage system, they either individually flash in red or flash together in red and green. Detailed information regarding the flashing pattern is given in the Pilot lamps section (page 71).

Fault indicators of the battery via the inverter

Detailed information regarding error codes displayed by the inverter are given in the corresponding section of the operating manual of the inverter manufacturer.

6.2 Actions to be taken in case of a damage

General information

If the battery storage system is used for the intended purposes, lithium ion batteries do not pose any risk. If cells and the housing are damaged, there is a risk of contact with electrolytes.

A WARNING
 Possible risk to life due to leaking electrolytes. If you do not observe the following behavioural instructions, they may cause material damage and personal injuries; BMZ Germany GmbH shall not bear any liability in such a case. Switch off the battery storage system if it is possible without any risk.
• Ensure adequate ventilation outside. Prevent these hazardous situations. Otherwise, they may lead to deaths or serious injuries.

Please follow the safety data sheet of the BSW: "Use of stationary lithium solar power accumulators" under www.solarwirtschaft.de

6.2.1 First aid measures

If the battery storage system and the battery modules installed in it are damaged, please initiate the following first aid measures:

Contact with skin and eyes:

- Skin irritations may occur. Wash the skin thoroughly with soap and water.
- Irritations in eyes may occur. Wash eyes thoroughly with water for 15 minutes and then visit a doctor.



Respiratory tracts:

- Generated gases may damage respiratory tracts.
- Ventilate immediately or go in fresh air; in worst cases, call a doctor immediately.

Burns:

- Do not touch the injured person until the de-energised status of the system is ensured
- Take freely lying live cables away from the injured person using non-conductor objects
- Ensuring breathing and the functioning of cardiovascular system is utmost important in case of unconscious patients. If necessary, initiate cardiopulmonary resuscitation immediately
- Let the burn injuries of responding patients cool and cover them with a sterile wound dressing



7 Service and maintenance activities

General information

The manufacturer recommends a regular annual maintenance of the battery system. Check the following points while doing this:

- Operate the battery with the current firmware
- Battery does not have external damage
- Air circulation outside and inside the battery is possible without any problem.
- Ventilation is clean and accessible
- Histogram of temperature progressions is not problematic and within the permissible temperature range of the battery (see section 5.2)

A deviation from normal operation is shown by the battery indicator of the inverter. The battery has an independent error memory that can be read by an expert authorised by BMZ Germany GmbH. If you have any queries regarding this, please contact BMZ Service.

BMZ Service Center Germany

If you have queries regarding the BMZ ESS system or require help, you can always contact the BMZ Service Center.

Business hours				
Monday to Friday		08:00 AM	to	4:00 PM
Saturday, Sunday and hol	lidays:	Closed		
Contact:				
Service telephone	+49 (0) 6188 99 56 9830			
Fax	+49 (0) 6188 99 56 699			
Website:	www.bmz-central-service	e.com		
Email:	CS.BigPack@bmz-group.c	com		

BMZ Service USA

Contact

Phone	+1 757 821 8494
Fax	+1 757 821 8499
Email:	Service.USA@bmz-group.com



7.1 Complaint handling

- 1. Contact a solar technician of BMZ Service via hotline +49 (0)6188 9956-9830 or email CS.BigPack@bmzgroup.com.
- BMZ Service asks solar technicians for the data of the memory (SN, pdf report and log file) -> service tool is required.
- 3. If it is not available, BMZ Service will send you the latest FW of the service tool and the complaint order free of charge.
- 4. The solar technician shall fill in the complaint order completely and send it along with the following documents to CS.BigPack@bmz-group.com:
 - Pdf-report of the battery
 - Error.log file
 - \circ Log file of the battery (data from a 10-minute download is sufficient
 - Installation checklist
 - Proof of purchase / original invoice
- 5. The solar technician will sign the complaint order to acknowledge that he/she has informed his/her wholesaler about this complaint.
- 6. If necessary, BMZ Service shall send a packing kit via a forwarding agency
- 7. If the solar technician packs the solar storage unit in a ready-to-dispatch condition, BMZ Service shall arrange for the pick-up from the solar technician.
- 8. BMZ Service shall pick up the storage unit from the solar technician, repair it and send it back to the solar technician (if the solar technician cannot rectify the problem).
- 9. In irreparable cases, BMZ Service shall send a replacement device and pick up the defective storage unit from the solar technician.
- 10. Business relationships exist only between BMZ and the OEM or its associated authorised dealers (solar technicians, dealers).
- 11. Direct complaint handling through end customers is ruled out.

If you have questions, please contact: Tel. +49 (0) 6188 9956-9830 or <u>CS.BigPack@bmz-group.com</u>



Warranty conditions 8

Please contact your authorized dealer for the local warranty conditions.



9 Dismantling and disposal

Introduction

This section describes the dismantling and disposal process for the battery storage system.

9.1 Disposal of the battery storage system

Risk of damage

Only the experts should dismantle the system.

Used batteries are collected by the distributor. Please contact the BMZ Service Center (Tel: +49 (0) 6188 9956 9830, email: CS.BigPack@bmz-group.com) regarding used batteries.

	WARNING AGAINST POISONOUS MATERIALS.
^	Numerous materials have been used in the battery storage system. Some of
	them may cause damage to people and the battery storage system if not handled properly.
	Always follow the local regulations for waste disposal.
	Appoint an authorised disposal company for professional disposal.
	Prevent these hazardous situations. Otherwise, they may lead to insignificant or minor injuries.

Material group	Degree of risk
Non-ferrous metal	High to very high
Stainless steel	Moderate
Plastics	Moderate
Electronic scrap	High
Batteries	Very high
Cables and lines	High

Degree of risk of materials



10 Annexe

Overview

The annexe contains the following documents:

- Declaration of conformity •
- Installation check list •



10.1 Declaration of conformity



Figure 10-1: EC Declaration of Conformity ESS 7.0 (1)

Document #30058-1



BMZ GMBH		
Am Sportplatz 28 · D-6 Tel: +49 (0)6188 9956- E-Mail: mail@bmz-group.	63791 Karlstein am Main 0 · Fax: +49 (0)6188-9956-9 .com · Internet: www.bmz-grou	and up.com THE INNOVATION GROUP
EC Certifica	tion of Conforr	nity
Company:	BMZ GmbH	
Address:	Am Sportplatz 28 63791 Karlstein	
Product:	Li-ion Battery	
Designation:	15S54P NCM1865	0-22E 55.5V 121.5Ah 6.7kWh
Item no.:	30890-00, 30891-00	0, 30892-00, 31560-00
We confirm that the des ponds to the substantia following European guid	ignated product corres- I requirements of the delines:	The conformity of the product with the guidelines is proven by the complete compliance to the following mentioned harmonized and not harmonized standards:
2011/65/EC RoHS D Directive of the Euro Council on the restri hazardous substanc equipment (recast)	birective opean Parliament and of the oction of the use of certain ses in electrical and electronic	
EN 62133:2013 Secondary cells and or other non-acid ele for portable sealed s batteries made from applications	I batteries containing alkaline ectrolytes - Safety requirements secondary cells, and for them, for use in portable	i
2014/30/EU EMC Di Directive of the Euro Council on the harm member states relat compatibility	rective opean Parliament and of the ionisation of the laws of the ing to the electromagnetic	EN 55014-1:2006 + A1:2009 + A2:2011 EN 55014-2:2015 EN 61000-3-2:2014 EN 61000-3-3:2013
	5.12.2017 For	n.V. Dik Ostrick
Karlstein am Main, 05	Sven Bauer, Mana	aging Director i.V. Dirk Oestreich, Director R&D
Karlstein am Main, 05	Sven Bauer, Mana	directives but does not include a property assurance.

Figure 10-2: EC Declaration of Conformity ESS 7.0 (2)





Figure 10-3: EC Declaration of Conformity ESS 9.0



BMZ GMBH Am Sportplatz 28 · D Tel: +49 (0)6188 9950 E-Mail: mail@bmz-grou)-63791 Karlstei 3-0 · Fax: +49 ip.com · Interne	n am Main (0)6188-9956-900 t: www.bmz-group.com		B ZZ THE INNOVATION GROUP
EG-Konform	nitätserl	klärung		
Firma:	B	MZ GmbH		
Anschrift:	An 63	n Sportplatz 28 791 Karlstein		
Produkt:	Lit	thium-lonen-Batter	ie	
Bezeichnung:	15	S54P NCA18650 35	5E 54V 186,3A	10,06kWh
Artikel-Nr. :	37	400-00		
Für das oben angegebe dass es den Anforderun Europäischen Richtlinie	ne Produkt bestä gen der folgende n u <mark>nd Norm</mark> en en	tigen wir, n tspricht:	Die Übereinstim wird nachgewies angeführten har Normen:	mung des Produkts mit den Richtlinien en durch die vollständige Einhaltung der monisierten und nicht harmonisierten
2011/65/EU RoHS- Richtlinie des Euro zur Beschränkung gefährlicher Stoffe	Richtlinie päischen Parlam der Verwendung in Elektro- und E	ents und des Rates bestimmter lektronikgeräten		
EN 62133:2013 Akkumulatoren un nicht säurehaltiger für tragbare gasdio hergestellte Batter Geräten	d Batterien mit alk Elektrolyten - Si hte Akkumulatore ien für die Verwei	kalischen oder anderen cherheitsanforderungen en und daraus ndung in tragbaren		
2014/30/EU EMV-R Richtlinie des Euro zur Angleichung de über die elektroma	tichtlinie päischen Parlam er Rechtsvorschri gnetische Verträg	ents und des Rates ften der Mitgliedstaaten glichkeit	DIN EN 55014-1 DIN EN 55014-2 DIN EN 61000-4 DIN EN 61000-4 DIN EN 62233:2	:2016 :2015 -2:2009 -3:2011 :008 + Ber.1:2009
Karlstein am Main, O	3.04.2018	Jew Sven Bauer, Geschäftsf	Dhrer	n. V. D. A. Ostocia
Diese Erklärung bescheinigt haftungsgesetzes zu.	die Übereinstimmu	ng mit den genannten Rich	tinien, sichert jedoch	keine Eigenschaften im Sinne des Produkt-
Geschäftsführer HRB-Nr. 5990 Aschaffenburg Commerzbank Sparkasse Aschaffenburg	Sven Bauer St. Nr.: 122/50444 BIC:COBADEFF799 BIC:BYLADEM1AS	UstID-Nr.: DE 811770243 BAN:DE357954004901057 BAN:DE71795500002400	70200 BLZ 79540049 04283 BLZ: 79550000	Kio. 1057702 Kio. 24004283

Figure 10-4: EC Declaration of Conformity ESS X



	THE INNOVATION GROUP
BMZ GmbH · Zeche Gustav 1 · D- 63791 Karlstein am Main	
Erklärung Declaration	
Bevollmächtigte Person / Authorized person:	BMZ GmbH
Firma / Company:	BMZ GmbH
Anschrift / Address:	Zeche Gustav 1, 63791 Karlstein, Germany
Produkte / Products:	Energie Speicher / Energy Storage BMZ ESS Z
Bezeichnungen / Designations:	15S4P, LiNiCoAlOz
Artikel-Nr. BMZ / BMZ item n*s:	610850
Für das bezeichnete Produkt wird bestätigt, dass es den wesentlichen Anforderungen der folgenden Europäischen Richtlinien und Normen entspricht: We confirm that the designated product corresponds to the substantial requirements of the following European guidelines:	Die Übereinstimmung des Produktes mit den Richtlinien wird nachgewiesen durch die vollständige Einhaltung der angeführten harmonisierten und nicht harmonisierten Normen: The conformity of the product with the guideline is proven by the complete compliance to the following mentioned harmonized and not harmonized standards:
2006/66/EG Batterieverordnung Richtlinie des Europäischen Parlaments und des Rates vom 6. September 2006 über Batterien und Akkumulatoren sowie Altbatterien und Altakkumulatoren und zur Aufhebung der Richtlinie 91/157/EWG 2006/66/EC Battery Directive Directive of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EE 2011/65/EU RoHS Richtlinie Richtlinie des Europäischen Parlaments und des Rates zur Beschrängkung der Verwandung bestimmter nefährlicher Stoffe	
in Elektro- und Elektronikgeräten Directive of the European Parliament and of the Council on the Restriction of the use of certain hazardous substances in electrical and electronic equipment	
2014/35/EU Niederspannungsrichtlinie Richtlinie des Europäischen Parlaments und des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten betreffend elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen 2014/30/EU Low Voltage Directive Directive of the European Parliament and of the Council on the harmonization of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits.	EN 60335-1:12 EN 62233:2008+Cor.1:2009
2014/30/EU EMV-Richtlinie Richtlinie des Europäischen Parlaments und des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit und zur Aufhebung der Richtlinie 89/336/EWG 2014/30/EU EMC Directive Directive of the European Parliament and of the Council on the harmonization of the laws of the Member States relating to electromagnetic compatibility	EN 55014-1:2012 EN 55014- EN 61000-42 EN 61000-43 EN 61000-44 EN 61000-46 EN 61000-46 EN 61000-46 EN 61000-411:2005 EN 61000-412:2007
Karlstein, 15.03.2021	
BMZ GMBH Geschäftsführer: Sven Bauer, Dr. Andreas Bacher · HRB 5890 Aschaffent Zeche Gustav 1 · D-63791 Karlstein am Main · Tel: + 49 61 88/99 56 – 0 ·	burg · Steuer-Nr.: 122/50444 · UStId-Nr.: DE 81 1770 243 mail@bmz-group.com · www.bmz-group.com
Deutsche Bank BIC:DEUTDEFF508 IBAN:DE855087000500105 Commerzbank BIC:COBADEFF795 IBAN:DE357954004901057	D1500 BLZ 50870005 Kto. 010501500 70200 BLZ 79540049 Kto. 1057702

Figure 10-5: EC Declaration of Conformity ESS Z



10.2 Installation check list

Company name of installer (please use upper case letters) Name, given name of installer Street and housenumber Postal code city of residence state Postal code city of residence state Serial number of BMZ ESS energy storage device S/N: Please fill in the checklist completely and send it to the battery manufacturer.	
operating instructions including the safety notes and installation instructions for the BMZ energy storage system. I confirm that I have successfully completed a BMZ training on the product BMZ ESS and received a certificate. I accept the terms of warranty."	installer
- attach copy of invoice – Checklist for installer	
- attach copy of invoice – Checklist for installer Required Tools The installer brings the following tools: Allen wrench reversible ratchet VDE insulated with extension (VDE insulated) wrench socket (VDE insulated) size 13, 17 Phillips screwdriver (VDE insulated) side cutter (VDE insulated) water pump pliers (VDE insulated)	Yes No

Figure 10-6: installation check list



Hequired accessories The installer is required to bring the following accessories or spare parts: Ifting carriage or hand truck with stair climbing function Multimeter (volt meter) NH1 fuse (depending on inverter with different nominal values) SI3.0M-11: 80 A SI4.4M-11: 100 A SI6.0H-11: 200 A	Yes No
Checking installation location Assembly space is okay	
Assembly space is okay	Yes No
 Distance to walls > 20cm air circulation possible no ignition source < 3m dry even clean no direct sunlight no salty air 	
Checking for damage	Yes No
(Never put a damaged battery into operation !) Inspect battery for damage (Never put a damaged battery into operation !)	
Checking installation	Yes No
 2 pcs 50 mm² cables connected communication cable connected no short circuit no incorrect polariry of main cables (positive and negative) cables not damaged or destroyed 	
Inserting NH fuses NH1 fuse is inserted (see operating instruction or installation instruction)	Yes No
Instructing the end customer	Yes No
operating instruction for end customer is conducted	
Reading the battery	Yes No
 System time is displayed correctly temperature memory is reset error memory is reset 	
SMA parametrization parametrization of SMA Sunny Island inverter is carried out	Yes No
Putting system into operation	Yes No

Figure 10-7: installation check list, part 2